



THE BRISBANE 18 FOOTERS SAILING CLUB Inc.

GPS COURSE / GARMIN GPS 72

'How To' Sheet

A. COLLECT GPS FROM 'LULU' FOR USE ON COURSE AND RETURN AT END OF DAY

B. TURN GPS ON

Step No.	HOW TO ACHIVE THIS
1	Press and hold red button until screen comes on.
2	On some older GPS a disclaimer appears. (Read this once ever) Press page to progress.
3	Wait (approx 2-5 minutes) while GPS acquires Satellites. Screen will change.

C. TURN GPS OFF

Step No.	HOW TO ACHIVE THIS
1	Press and hold red button until screen goes blank.

D. CHECK BATTERIES

Step No.	HOW TO ACHIVE THIS
1	With GPS turned on press 'Menu' twice. On the 'Main Menu' screen now showing. The battery level indicator 'Power' is in the bottom right corner.
2	Press 'Quit' to return to starting page.

E. INSTALLING / CHANGING BATTERIES

Step No.	HOW TO ACHIVE THIS
1	Ensure unit is turned off.
2	Lift and rotate the small screw in the back of the Unit a quarter turn anti-clockwise.
3	Gently pull on the screw handle. The back will lift off exposing the batteries. (empty battery compartment)
4	Remove dead cells and replace with fresh AA cells. Be careful to match the polarity to the diagram in the bottom of the battery compartment.
5	Gently replace the back cover and rotate the locking screw and depress handle. Also ensure the rubber tab covering the electrical socket is replaced.

NOTES:

The units are advertised to float. To my knowledge this has not been put to the test and is not recommended.

If the casing is covered in salt at the end of the day a quick rinse in fresh water, followed by drying with a soft absorbent cloth is recommended.

F. ESTABLISH A WAY POINT

Step No.	HOW TO ACHIVE THIS		
1	When at the desired location press ENTER and hold until two beeps are heard. The screen will change to the MARK WAYPOINT screen.		
2	Scroll down to ok.		
3	Scroll left to GO-TO, hit ENTER.		
4	The screen will revert to the starting screen, press PAGE to get the screen showing <table border="1" style="margin-left: 20px;"> <tr> <td>Bearing°m</td> </tr> <tr> <td>Dist To Next.....nm</td> </tr> </table>	Bearing°m	Dist To Next.....nm
Bearing°m			
Dist To Next.....nm			

G. RE-ESTABLISH A ‘GO-TO’ TO A STORED WAYPOINT AFTER GPS HAS BEEN TURNED OFF.

Step No.	HOW TO ACHIVE THIS
1	Follow instructions to turn GPS on.
2	Press ‘Go-To’ button. Screen will change to ‘Go-To’ screen
3	Navigate to ‘Waypoint’. Press ‘Enter’
4	Navigate to required waypoint number. Press ‘Enter’. The screen will revert to the starting screen.
5	Press ‘Page’ repeatedly until you return to the required screen. Note: If you overshoot in pressing ‘Page’ keep going until you get to the required screen again.

NOTE: Pressing ‘Quit’ will return you to the previous screen. Pressing ‘Quit’ will also have the same effect as pressing ‘Page’ for general screens only in the reverse direction.

H. DELETE ALL WAYPOINTS

Step No.	HOW TO ACHIVE THIS
1	Press ‘Menu’ button twice to get to main menu.
2	Navigate to ‘Points’ and press ‘Enter’.
3	Navigate to ‘Waypoints’ and press ‘Enter’.
4	Press ‘Menu’.
5	Navigate to ‘Delete All’. Press ‘Enter’.
6	Navigate to ‘Yes’. Press ‘Enter’.

NOTES:

This procedure can be conducted at the end of the day’s sailing to prepare the GPS for return to ‘Lulu’.

The deletion of individual waypoints is similar except the individual waypoint must be selected.

FOR ALL OUR COURSES, THE PATROL BOATS WILL BE REQUIRED TO CREATE A WAYPOINT AT THE START BOAT, AND THE COURSE WILL RADIATE OFF THIS.